


BLU-TEC

POWERED BY **Promati**

CERAPRO RINGS

for return idlers

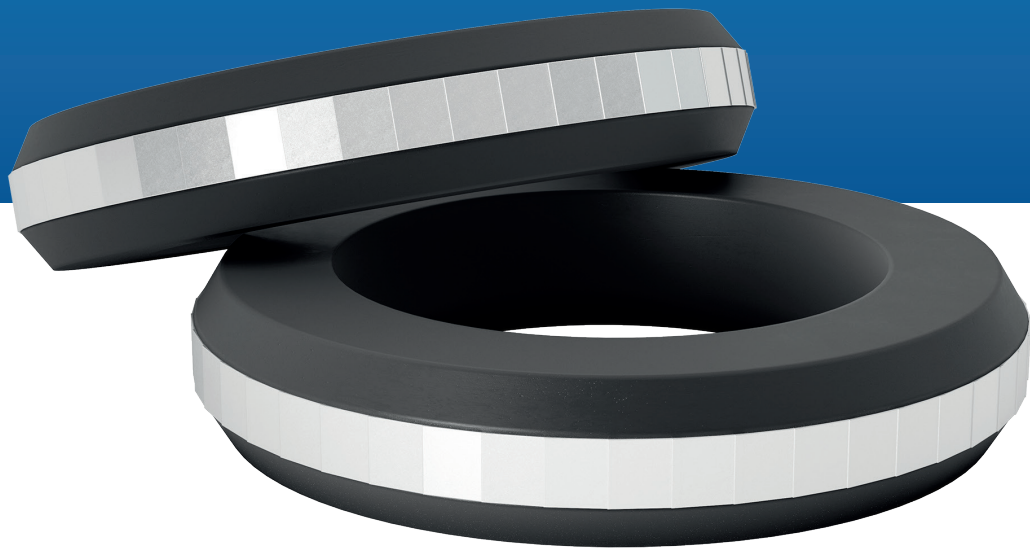

Ambachtenlaan 3 - 9990 Maldegem - T. +32 10 84 83 90 - F. +32 10 84 83 99
Chaussée de Wavre 362 - 1390 Grez-Doiceau - België - T. +32 10 84 83 90 - F. +32 10 84 83 99
Nikkelstraat 45 - 4823 AE Breda - Nederland - T. +31 162 47 14 99
info@blu-tec.eu
www.blu-tec.eu

CERAPRO

for return idlers

The surface in contact with the belt is made of ceramic tiles, compared to the classical ring in rubber.

The wear of the rings is hereby drastically reduced. Consequently, the **CERAPRO** rings should not be replaced rapidly and can eventually be re-used when the roller is worn out.

The **CERAPRO** ring reduces the contact surface between the belt and the roller, which consequently reduces also the losses of product underneath the conveyor. The clogging of the rollers, which causes belt misalignment, is also improved.

Considering the longer lifetime compared to standard rings, the changing of the rollers will happen after a longer period (no more wearing of the steel tubes,...). This reduces strongly the maintenance costs.


ADVANTAGES:

- ✓ Excellent wear resistance
- ✓ Increased lifetime of the rollers
- ✓ Reduced maintenance and cleaning costs
- ✓ Smaller product losses
- ✓ Easy installation and replacement

WITHOUT RINGS




WITH RINGS

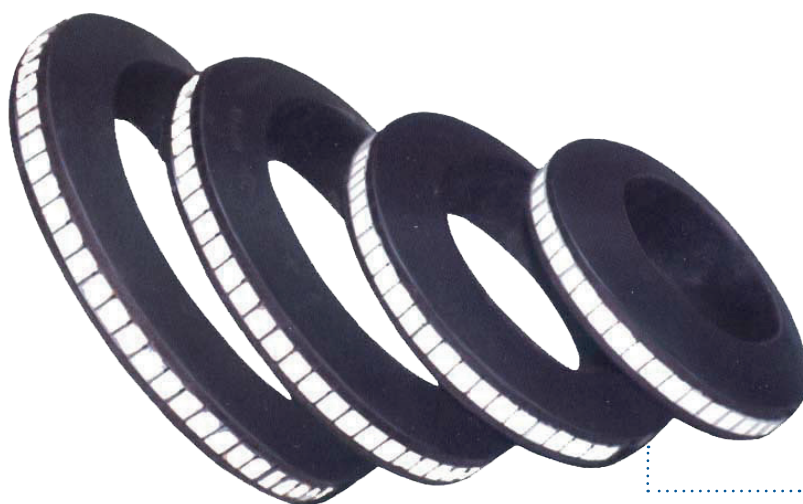

CERAPRO rings

Example of distribution of **CERAPRO** and rubber rings onto the roller in function of the belt width:

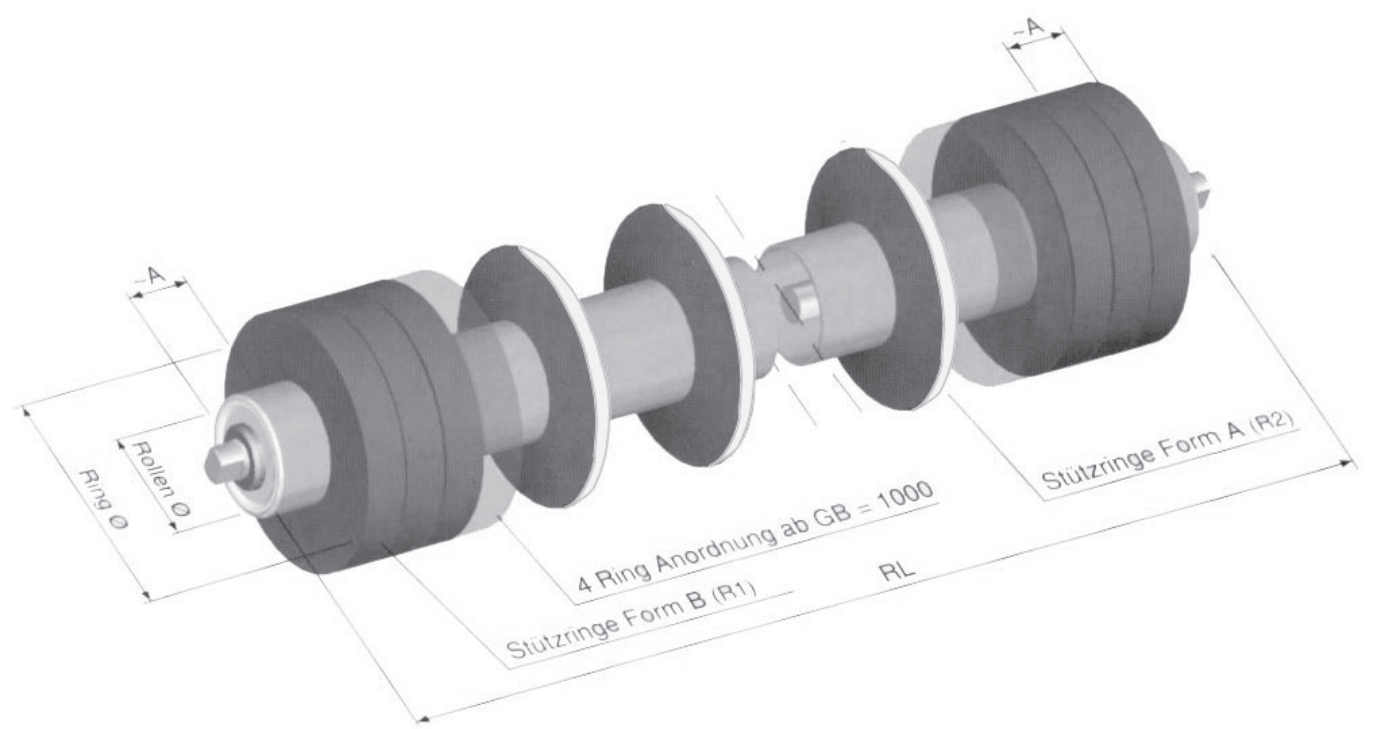

Roller length (mm)	Belt width (mm)	Possible distribution of the rings
750	650	Flat sleeve 120 mm - 1 A - 1 C - 1 A - Flat sleeve 120 mm
950	800	Flat sleeve 120 mm - 2 A - 2 C - 2 A - Flat sleeve 120 mm
1150	1000	Flat sleeve 160 mm - 1 A - 3 C - 1 A - Flat sleeve 160 mm
1400	1200	Flat sleeve 160 mm - 2 A - 3 C - 2 A - Flat sleeve 160 mm
1600	1400	Flat sleeve 160 mm - 3 A - 4 C - 3 A - Flat sleeve 160 mm
1800	1600	Flat sleeve 160 mm - 4A - 4 C - 4 A - Flat sleeve 160 mm

(Flat sleeve : Cylindrical rubber rings / Ring A : ovoid rubber rings / Ring C : CERAPRO ring)

NORMALIZED DIAMETERS:

- Ø tube : 63,5 mm — Ø outer ring : 108/133 mm
- Ø tube : 70 mm — Ø outer ring : 108/133 mm
- Ø tube : 89 mm — Ø outer ring : 133/159/180 mm
- Ø tube : 108 mm — Ø outer ring : 159/180 mm